



The Door Latch we use is 2 3/8" or 2 3/4" backset. To install in a 2 3/4" backset you need to remove the black Insert from the latch assembly. (Fig1)  
Start by pushing in the latch button on the front of the latch assembly in, (Fig 2)

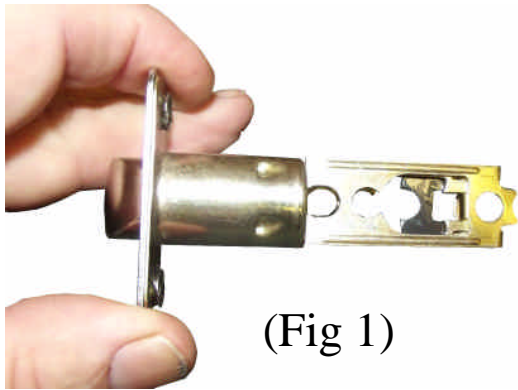

(Fig 1)

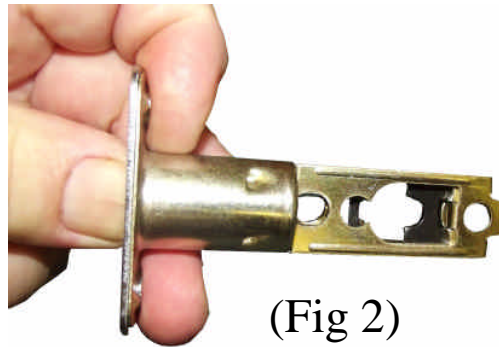

(Fig 2)

Then use a small screw driver to push down on the black insert slightly, (Fig 3) Now release the button and pull the insert out the bottom (Fig 4)  
Now it is ready to install in a 2 3/4" backset door. (Fig 5)



(Fig 3)



(Fig 4)



(Fig 5)